



Номер на схеме	Артикул	Наименование	Кол-во в инструменте
4	P03235-00	retaining ring	1
5	P03224-00	nose sleeve	1
6	P03245-00	adaptor sleeve M8	1
7	F60075H00	O-ring	1
8	P03234-00	sleeve	1
11	F00021-00	O-ring	1
12	P00047-00	piston pin washer	1
13	F00022-00	U-ring	1
14	P00009-00	screw	1
15	F00002-00	washer	1
16	A00162-00	assembly oil cylinder	1
17	F00054-00	U-ring	1
18	P00217-00	support ring	1
19	F60049-00	O-ring	1
20	A00161-00	assembly plunger	1
21	P03513-00	return spring outer	1
23	P03240-00	spring seat	1
24	A00163-00	spring sleeve	1
25	P03289-00	rod	1
26	P00541-00	nut	1
27	P03241-00	knob	1
28	F00029-00	U-ring	1
29	P00072-00	support ring	1
30	A00029-00	assembly air cylinder	1
31	P00073-00	oil cyliner locknut	1
32	F00030-00	O-ring	1
33	F00036-00	O-ring	1
34	A00030-00	assembly air plunger	1
35	P00096-00-00	piston pedestal	1
36	F00038-00	O-ring	1
37	P00242-00	screw	7
38	P00030-00	switch lower base	1
39	F00011-00	O-ring	2
40	F00010-00	O-ring	1
41	P00031-00	switch upper base	1
42	P00068-00	switch shaft spring	1
43	F00012-00	O-ring	1
44	A00031-00	assembly trigger shaft	1
45	F00013-00	pin	3
46	P00099-00	lever	1

47	P00245-00	connecting rod	1
48	P00058-00-77	trigger-short red	1
49	A00069-00-00	assembly grips	1
50	F00014-00	pin	1
51	P00039-00	screw	4
52	F00147-00	air adaptor EU	1
54	F00016-00	O-ring	3
55	P00164-00	assembly air adaptor joint	1
56	F00048-00	A-circlip	1
57	P00040-00	adaptor joint	1
accessory	P03150-00	hook	1
accessory	P03847-00	wrench	1
accessory	A00009-00	oil injection set	1

Cutter Sets:

A02121-01	Cutter Set M5	
A02124-01	Cutter Set M6	
A02119-01	Cutter Set M8	
A02120-01	Cutter Set M10	

Cutters:

P03228-00	Cutter M5	
P03227-00	Cutter M6	
P03226-00	Cutter M8	
P03232-00	Cutter M10	